





# Motorized Blind Remote Control

## Controlling Your Blinds

Press the left and right arrows to switch back and forth to the corresponding blind you want to open or close. The sequence in which your 6-Channel remote is programmed will go from left to right in your room.

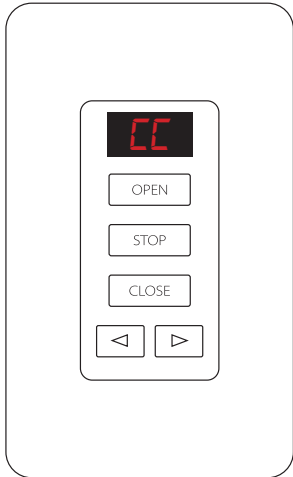

**CC** means ALL blinds in that room will open or close at the same time.

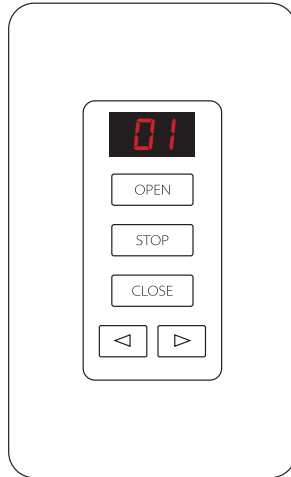

The arrow keys at the bottom will cycle through 6 channels:

- 01** – the first two blinds on the left
- 02** – depending on your unit layout, will either open the next 2 blinds OR the 2 blinds on either side of the patio door
- 03** – depending on your unit layout, will either open the living room patio door blind OR the next 2 blinds in sequence
- 04** – the next 2 blinds in sequence
- 05** – the next 2 blinds in sequence
- 06** – the next 2 blinds in sequence

*Depending on unit size and number of blinds, more blinds may be wired to one channel, or the unit may not require all 6 channels*

## Battery Replacement

If your blinds stop responding to remote commands, the batteries in your remote control may be depleted. Depending on the frequency of use, your batteries will last anywhere from one to three years. Replacing them is easy:

1. If no screws are visible on the cover plate, you can gently pry it off from one edge until it pops off.
2. If your cover plate style has screws visible, remove them and set them aside
3. Remove screws holding the remote in place, and slide it out of the wall.
4. Turn the remote over, and remove the battery cover
5. Insert 2 new AAA batteries. *Note: lithium batteries are slightly more expensive, but will last 5x longer than regular batteries*
6. Replace battery cover, and insert remote back into the wall
7. Replace the remote and cover plate screws, ensuring you don't over-tighten them